


BS Hoffman Frame Assembly Instructions

1




Break out wooden wedge from the top bar and place to one side.

2

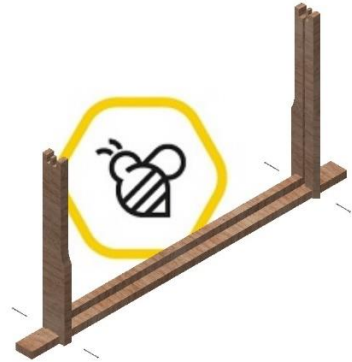


Insert side bars in to the notches from the top bar and using the Pin nails provided; secure in to place with 4 nails

3

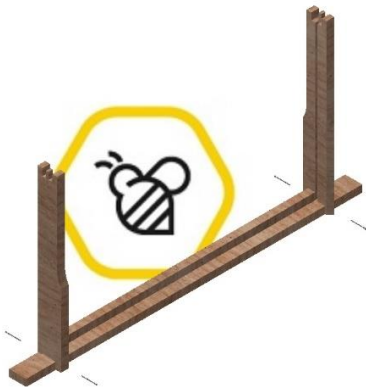


Insert side bars in to the notches found on the top bar and using the Pin nails provided; secure in to place with 4 nails

4

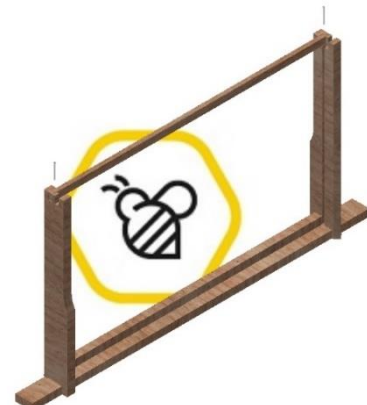


Place one of the bottom rails in to the corresponding slots found on the side bars and secure in to place with 2 pin nails.

CROSS APIARY

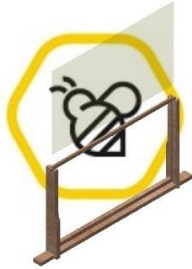


5

Gently slide 1 layer of bees wax down the slots in the side bars until it has reached the bottom of the slot in the top rail

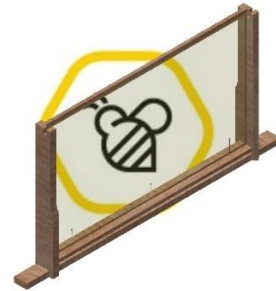


6

Secure wooden wedge back into place with 3 pin nails.

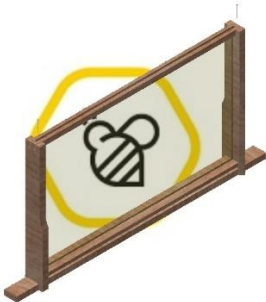

7

Insert the last remaining bottom rail in to the corresponding slots found on the side bars and secure in to place with 2 pin nails.

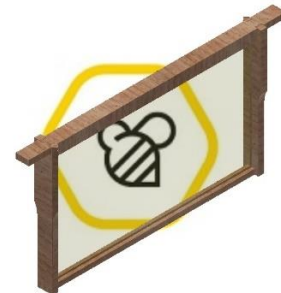

8

Completed Frame.